

SAGE NOBEL

DIY CORNHOLE GUIDE




SHOPPING LIST

<input type="checkbox"/> Cornhole Boards	2ft x 4ft	CLICK HERE
<input type="checkbox"/> Paint (2 shades)	Glidden: “Beach Grass” Glidden: “Dancing Kite”	CLICK HERE
<input type="checkbox"/> Painter’s Tape	1.5-inches	CLICK HERE
<input type="checkbox"/> Paint Tray/Roller	(includes paint brush)	CLICK HERE
<input type="checkbox"/> Vinyl Lettering	Color: “Olive”	CLICK HERE
<input type="checkbox"/> Brayer Roller	(to apply vinyl)	CLICK HERE

Some links may be affiliate links. As an Amazon Associate I earn from qualifying purchases.

PAINING GUIDE


YOU WILL NEED

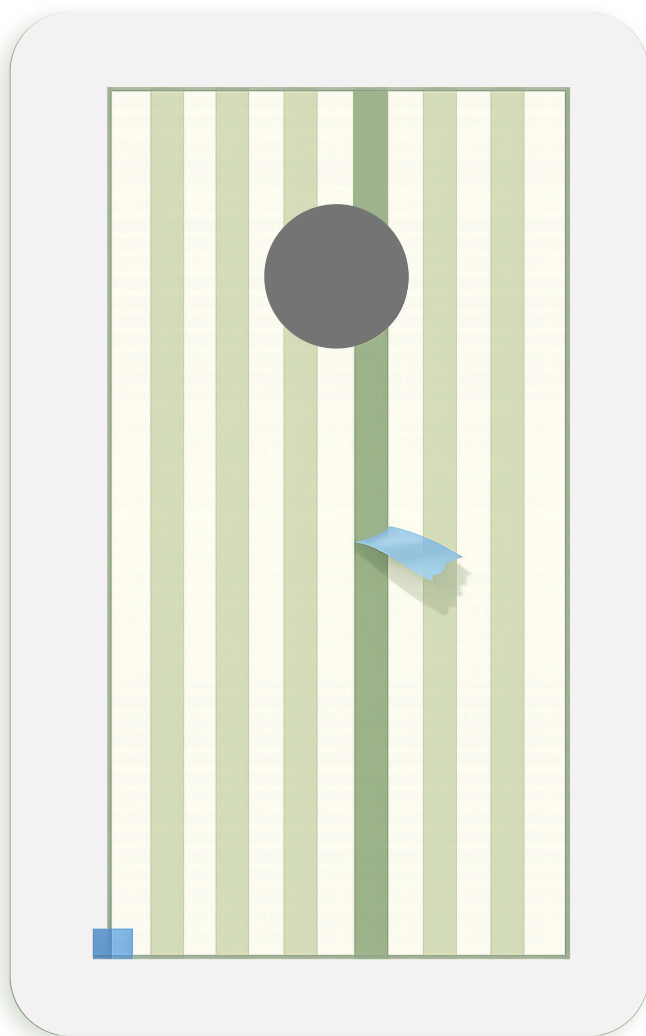

STEPS


1 Base coat

Paint 2-3 coats of the lighter shade of green (“**Beach Grass**”) over the full board. Let each coat fully dry before adding the next.

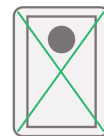

2 Tape one edge

Once dry, run one full strip of 1.41-inch painter's tape from top to bottom along one edge of the board.

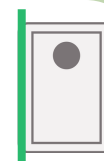

3 Build pinstripes

Continue laying tape strips across the board. Use a small torn piece of tape as a space so every column stays the same width,



4 Paint stipe color

After the full surface is taped, paint the exposed gaps with the darker shade of green (“**Dancing Kite**”). Apply 2-3 coats for solid coverage.



5 Remove tape

Wait until the paint is mostly dry, then peel the tape back slowly for the cleanest line.



- TIP**
- Press the tape edges down firmly before painting so color does not bleed underneath.
 - Pull the tape back at a low angle. If any paint lifts, let the board cure fully before doing any touch-ups.

VINYL APPLICATION GUIDE

YOU WILL NEED



Board
2 ft x 4 ft




Tape
measuring tape



Pencil
light marks




Roller
apply vinyl

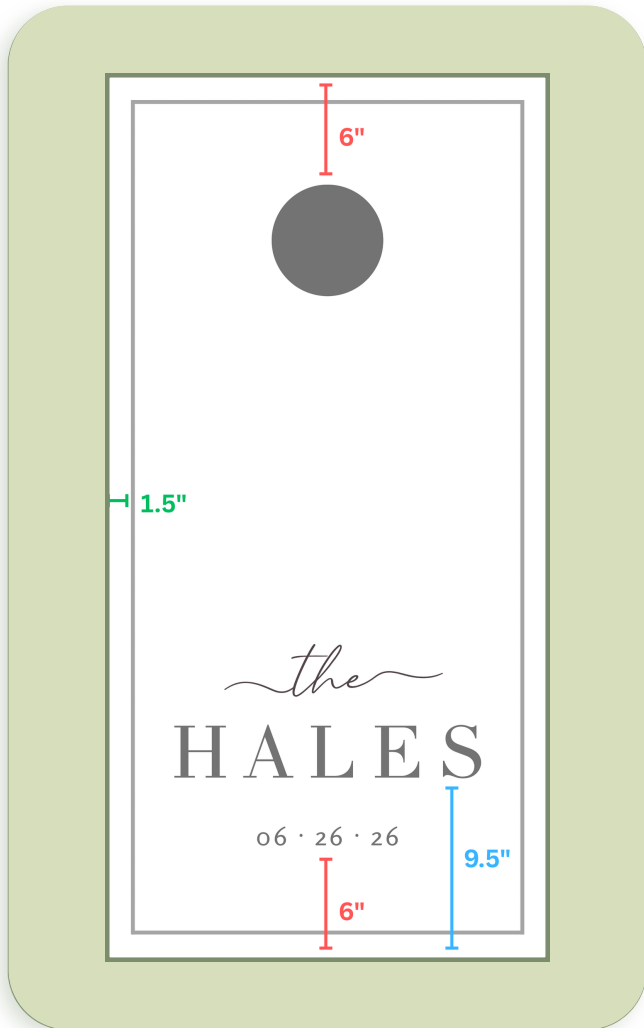

STEPS


1 Mark border

Measure **1.5-inches** from each edge and lightly sketch a guide border with a pencil.

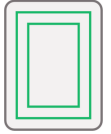


2 Place corners

Apply the vinyl corner pieces first, lining them up carefully with your pencil border.

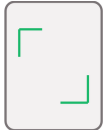


3 Finish border

Add the straight border strips next. Slightly overlap the ends, then trim off any excess vinyl.

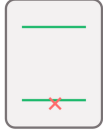


4 Apply date

Place the date **6-inches** from the bottom edge so it mirrors the hole spacing at the top.

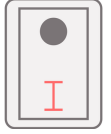

5 Apply name

Apply the name next. Set the base of the lettering **9.5-inches** from the bottom edge.

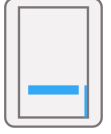

6 Apply "the"

Center "the" above the name and apply it last, once the spacing looks balanced.



TIP

- Decide on the placement first, before peeling off the white plastic and sticking the vinyl to the board.
- Press the vinyl down slowly with the roller and work from the center outward.